

Barbasol[®]

Rechargeable Beard & Hair Trimmer



USE AND CARE GUIDE

(For model: CBH1-4001)

Manufactured under exclusive license of Perio Inc. ©Barbasol

PLEASE RETAIN THIS USE & CARE GUIDE FOR FUTURE REFERENCE

When using an electrical appliance, basic precautions should always be observed. Read all instructions before using this trimmer.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a trimmer that has fallen into water. Unplug it immediately.
2. Do not charge while bathing or in the shower.
3. Do not charge this trimmer near a tub, toilet or sink.

WARNING/IMPORTANT

1. Read the use and care guide thoroughly before using the trimmer.
2. Use the trimmer only for purposes described in this use and care guide.
3. For hygienic reasons, the trimmer should not be shared with others.
4. Regularly check the blade condition. If signs of damage are visible, do not use and notify email support at support@barbasolelectric.com.
5. Do not use if skin is red, irritated, inflamed, infected or blistered.
6. This trimmer is for household use only.
7. Do not place or store the trimmer in direct sunlight. Store only in a cool, dry place.
8. Keep the trimmer out of reach of children.
9. Do not charge the trimmer where the temperature is less than (32°F), or more than (100°F), or where it will be exposed to direct sunlight, a heat source or near excessive moisture.
10. Use the included USB charging cord only.
11. Dry the appliance completely before charging it.
12. Keep the USB charging cord away from water and handle with dry hands.
13. Grip the USB charger when disconnecting it from an AC outlet, tugging on the USB cord may damage it. Store the cord in a dry area where it will be protected from damage.
14. Do not pull, twist, or severely bend the cord.
15. Do not wrap the USB charging cord tightly around the appliance.
16. Do not take the housing apart.

CHARGING

1. Prior to first use, charge for 8 hours.
2. Regular shaving will require 8 hours charging time for 60 minutes of runtime. Usage time may decrease over time.
3. Do not overcharge, as this may damage the battery life.
4. The trimmer will not charge when it is switched on. Be sure to check that the ON/OFF switch is set to OFF when charging.
5. Connect the charging cord on the charging connection of the appliance.
6. Connect the other end of the charging cord to a USB charger, current 5V 1A.


PARTS IDENTIFICATION

1. ON/OFF switch
2. Adjusting wheel for guiding comb
3. Thin / Cut function .
4. Stainless steel blade
5. Guiding comb
6. Body
7. Charging indicator
8. Oil
9. Cleaning Brush




HOW TO USE THE TRIMMER


1. To install the comb, align the comb frame with the slots on both sides of the trimmer frame and push it in.

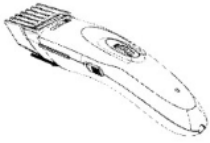

2. To dismount the comb, withdraw it directly out of the trimmer frame.

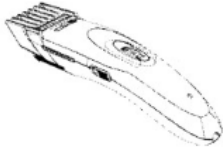

3. Turn the wheel to set your trim length. The cutting comb trims in 2mm increments, with 2mm at its shortest, and 16mm at its longest.

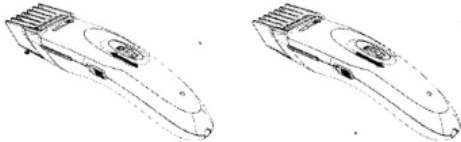

4. Thin / Cut function- Select the trimmer at the “Thin” function for beard trimming. Select the “Cut” function for a 0mm cut; this will achieve the closest shave possible.



ENVIRONMENTAL PROTECTION

The trimmer is equipped with contained substances which may result in environmental

pollution.

Do not dispose of the trimmer with household waste. Please properly dispose at your local recycling center.



2-Year Limited Warranty

Questions: call toll-free Barbasol Customer Service (844) 777-9601

Email Support: support@barbasolelectric.com

This trimmer is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.