

Barbasol[®]

Pro Hair Clipper Kit



USE AND CARE GUIDE

(For model:CBH1-4003)

PLEASE RETAIN THIS USE & GUIDE FOR FUTURE REFERENCE


WARNING/IMPORTANT

1. Read the use and care guide thoroughly before using the appliance.
2. Use the appliance only for purposes described in this use and care guide.
3. For hygienic reasons, the appliance should not be shared with others.
4. If signs of damage are visible, do not use appliance and notify email support at customerservice@xtremecables.com.
5. Do not use if skin is red, irritated, inflamed, infected or blistered.
6. This appliance is for household use only.
7. Do not place or store the appliance in direct sunlight. Store only in a cool, dry place.
8. Keep the appliance out of reach of children.
9. Do not use in a bath tub, shower or sink, and never submerge in water.
10. Do not reach for an appliance that has fallen into water. Unplug immediately.
11. When plugged in, never leave this appliance unattended.
12. Do not operate this appliance if it has been damaged or if the cord or any accessories have been damaged.
13. Keep the cord away from heated surfaces.
14. Do not pull, twist or wrap the cord around the appliance.
15. Never drop or insert any object into any opening of the appliance.
16. Before use, make sure the blades are aligned properly.
17. Do not put on a flat surface while it is in use.


Included With Your Appliance

- One Pro Clipper
- Twelve Guide Attachments
- One Pair of Scissors
- One Comb
- One Cleaning Brush
- Two Lubricating Oils
- Use and Care Guide with Warranty information

A QUICK LOOK AT YOUR PRODUCT

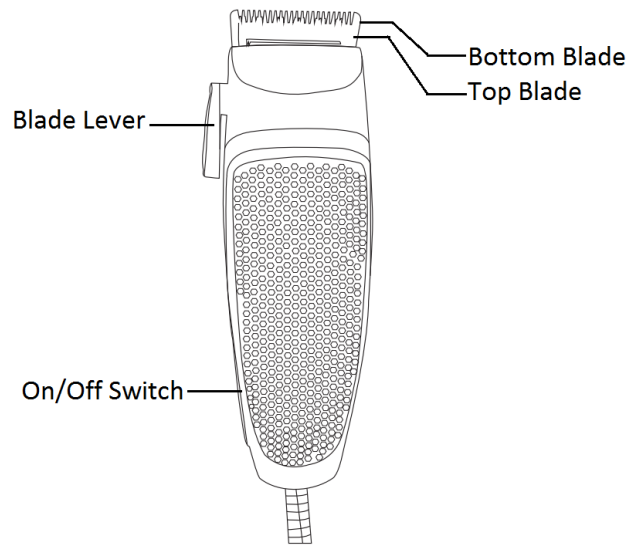


ACCESSORIES

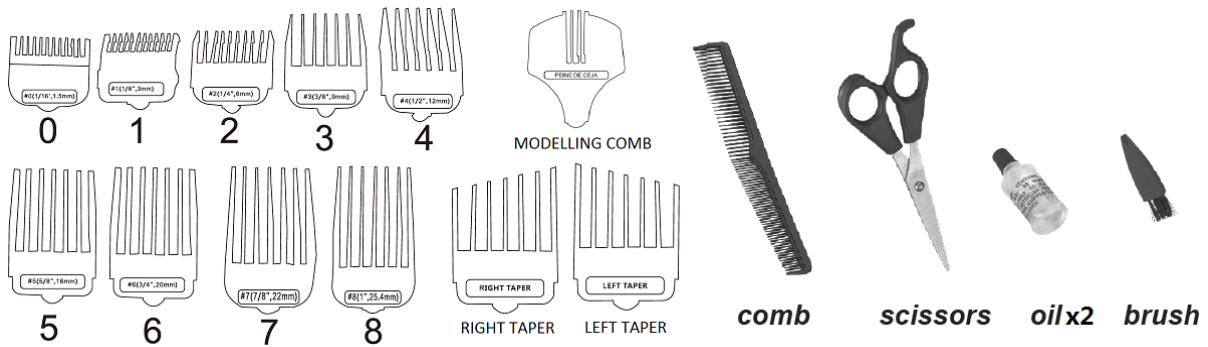

BLADE ALIGNMENT


Your clippers were carefully examined to ensure that the blades will be oiled and aligned right out of the package.

Blades must be realigned if they have been removed for cleaning or replacement.

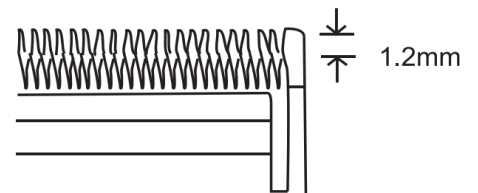

To realign the blades, simply match up the teeth of the upper and bottom blades so that they line up with the end of the top blade approximately 1.2m back from the bottom blade.


If the blades have not been aligned correctly, add a few drops of oil to the blades, turn the clipper on for a few moments, and then turn it off and unplug it. Loosen the screws slightly and adjust. Then tighten the screws after the blade is aligned.

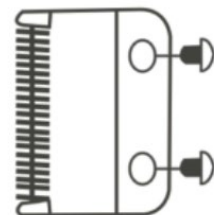

OIL

To keep your clipper in top condition, the blades should be oiled after every few haircuts.

Do not use hair oil, grease, oil mixed with kerosene or any solvent. Solvents will evaporate and leave a residue which can clog the motion of the blades.

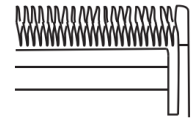


BLADE LEVER

The blade lever is conveniently located near your right thumb if you are right handed, so that it can easily be accessed while you are holding your clipper.

The lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without an attachment comb.

When the lever is in the uppermost position, the blades will give you the closest cut leaving your hair very short. Pushing the lever downward gradually increases the cutting length.

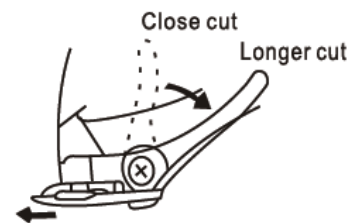

In its lowest position, the lever will leave the hair the same length as a #1 guide attachment comb.

The lever will also extend the use of your blades since a different cutting edge is used in each setting.

If heavy hair cutting has jammed the blades, you can adjust the lever to help remove wedged between the blades.

INSTRUCTIONS FOR CUTTING HAIR

Before starting the hair cut:

1. Inspect the clipper, making sure that it is free of oil between the cutting blade teeth. Wipe off any excess oil. This should be done after each use. While using your clipper, untwist the cord from time to time in order to avoid tangling.
2. When cutting someone's hair, have them sit with their head at eye level. This gives you superior visibility while still giving you comfortable control of your clipper.
3. Always comb the hair first before trimming.
4. Place a towel around the neck and shoulders of the person having the haircut.

REMINDERS

-Cut the hair in a slow relaxed manner. Use short strokes only, working gradually over the entire head.


-Always take off a little bit of hair at a time. More hair can always be trimmed later.

-As you work,comb the hair frequently back into the style in which you are cutting.

-It is better to keep the hair dry when cutting with this clipper.

BEGINNING THE CUT

1.Cutting hair requires practice,so it is always better to leave your hair longer for the first few haircuts until you become used to the length that each comb attachment cuts the hair.

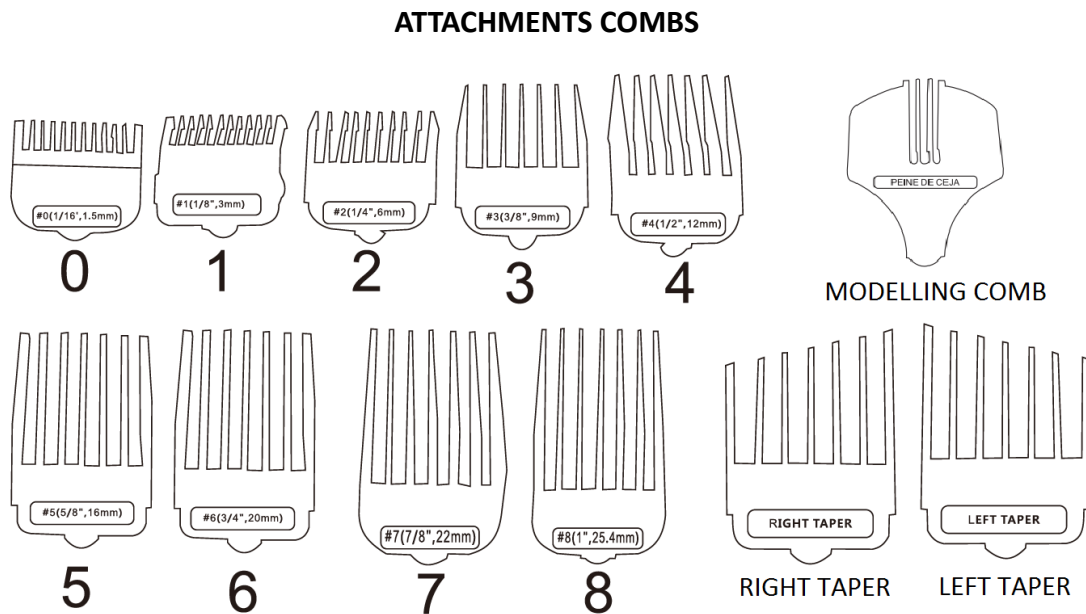

Attachment Comb #0 leaves 1.5mm(1/16 inch) hair length

Attachment Comb #1 leaves 3mm(1/8 inch) hair length

Attachment Comb #2 leaves 6mm(1/4 inch) hair length

Attachment Comb #3 leaves 9mm(3/8 inch) hair length

Attachment Comb #4 leaves 12mm(1/2 inch) hair length

Attachment Comb #5 leaves 16mm(5/8 inch) hair length

Attachment Comb #6 leaves 20mm(3/4 inch) hair length

Attachment Comb #7 leaves 22mm(7/8 inch) hair length

Attachment Comb #8 leaves 25.4mm(1 inch) hair length

Attachment Comb Right Taper

Attachment Comb Light Taper

Attachment Comb Modelling Comb

Each comb attachment is marked on its surface.


2. To attach a comb,hold it with the teeth up and slide it onto and along the clipper blade until it is seated securely.

3.For even cutting,allow the attachment to cut its way through the hair.Do not force it through quickly.Remember to comb the hair frequently to remove trimmed hair and check for uneven strands.

STEP 1:NAPE OF THE NECK

1. Attach either a 3mm or 6mm attachment comb.

2. Have the cutting edge of the clipper pointing up and begin the hair cut,starting at the center of the head at the base of the neck.

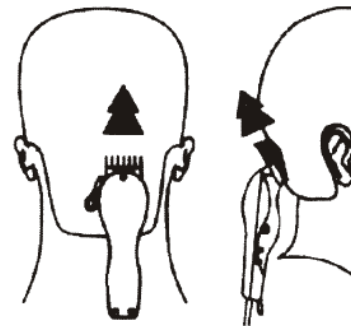

3. Hold the clipper comfortably in your hand,gradually sliding upwards as you cut without putting too much pressure on the head.

4.As you cut,gradually lift the hair clipper towards you.Continue to cut the back area from the bottom of the neck upwards to the top of the ears.

STEP 2:BACK OF THE HEAD

Change to the next longest comb attachment(9mm or 12mm) and cut the back of the head.



STEP 3:SIDE OF THE HEAD

Change to one of the shorter comb attachments (3mm or 6mm) and trim the sideburns.Then change to one of the longer comb attachments (9mm or 12mm) and continue to cut the top of the head.



STEP 4:TOP OF THE HEAD

1.Using a 9mm or 12mm comb attachment,cut the top of the head from back to front in the opposite direction that the hair usually grows.In some cases this might require cutting from front to back.

2.Comb attachment of 3mm or 6mm can be used to achieve a close crew cut or short cut.

3. For longer hair on top,use the included comb to lift the hair and then cut over the comb so that only a portion is trimmed a desired length.Always work from the back of the head.You can cut the hair shorter gradually by reducing the space between the comb and the head.Comb out trimmed hair and check for uneven strands.




STEP 5:THE FINISHING TOUCH

1.Finally,use the taper lever without any attachments for close trimming around the base of the neck,the side of the neck and the ears.

2.To produce a clean straight line at the sideburns,reverse the hair clipper so that you shave that area both with and against the grain.

3.Press the clipper at right angles to the head so that the tips of the blades are lightly touching the skin in order to get a more razor close shave.

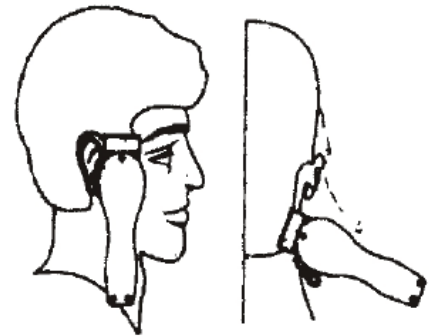

TAPERED STYLES:FLAT TOPS & SHORT CUTS

1.Starting with longest attachment comb,(12mm) cut from the back of the neck to the crown. Hold the attachment comb flat against the head and slowly move the clipper through the hair.

2.Use this same procedure from the lower side to the upper side of the head,Then cut the hair in the opposite direction as it grows from the front to the crown and then level the cut with the sides.

3.To give a “flat top” look, the hair on top of the head must be cut over the top of a flat comb rather than by using an attachment comb.

4.Use closer attachment combs to taper the hair down the neckline as desired.Comb the hair and check for uneven areas as previously described.



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked waste products must not be mixed with general household waste, but kept separate for treatment, recovery and recycling of the material used.

For proper treatment, recovery and recycling: please take all WEEE marked waste to your local recycle center.



2 Year Limited Warranty

Questions: call toll-free at 877- 536-8766

Email Support: customerservice@xtremecables.com

This appliance is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow operation and instruction guide will void this warranty.

Do not return to store. Please send a proof of purchase, return label with your name and address, along with a check for \$4.95 to cover S/H. Please allow 6-8 weeks to process your return.

Make check payable to Xtreme Personal Care, Inc.

Clip & Return to:

Xtreme Personal Care

32 Brunswick Ave.

Edison NJ 08817

Att: Customer Service

Customer Name _____

Return Address _____

Date Purchased _____

Store _____

Brief Description of Issue _____