

# *Barbasol*®

## HAIR, FACE & BODY TRIMMER



### USE AND CARE GUIDE

(For model:CBH1-4006-SIG)

Manufactured under exclusive license of Perio Inc.© Barbasol

## **PLEASE RETAIN THIS USE & GUIDE FOR FUTURE REFERENCE**

 
### **WARNING/IMPORTANT**

1. Read the use and care guide thoroughly before using the appliance.
2. Use the appliance only for purposes described in this use and care guide.
3. For hygienic reasons, the appliance should not be shared with others.
4. If signs of damage are visible, do not use the appliance and notify email support at [support@barbasolelectric.com](mailto:support@barbasolelectric.com).
5. Do not use it if skin is red, irritated, inflamed, infected or blistered.
6. This appliance is for household use only.
7. Do not place or store the appliance in direct sunlight. Store only in a cool, dry place.
8. Keep the appliance out of reach of children.
9. Do not use in a bathtub, shower or sink, and never submerge in water.
10. Do not operate this appliance if it has been damaged.

### **BATTERY CARE**

For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

- The appliance is only to be used with the power supply unit provided with the appliance.
- This appliance contains batteries that are non-replaceable.
- The battery must be removed from the appliance before it is scrapped
- The appliance must be disconnected from the supply mains when removing the battery
- The battery is to be disposed of safely.
- Only remove the rechargeable battery when you are intending to discard the appliance and you have the rechargeable battery removed by a professional.



Always use the specified adaptor by the factory.

### **To reduce the risk of burns, fire, electric shock or injury to persons:**

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or certain disabilities.
- Use this appliance only for its intended use as described in this manual.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.

- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F(60°C)
- Make sure the cord is disconnected from the groomer stand when storing.
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.

### **Professional Hair Clipper**

Use the extra-wide hair trimmer without a guard to clip the hair on your head very close to the skin or to contour the neckline and area around the ears.

1. To contour the hairline around the ears, comb the hair ends over the ears.
2. Tilt the product in such a way that only one edge of the cutter blades touches the hair ends when you shape the contours around the ears.
3. To contour the nape of the neck or sideburns, turn the product and make downward strokes.
4. Move the product slowly and smoothly following the natural hairline.
5. In the boot state, press "T" (TURBO) to accelerate the power, customers can use according to the situation



### **Hair guards**

Install a conditioner on a professional clipper to trim your hair evenly. The product comes with 4 hair guards (3mm,6mm,9mm,12mm). The hair length settings are indicated on the guards. The settings correspond to the remaining hair length after trimming.

### **Hair length adjustment function**

4 kinds of hair length (1.0mm, 1.3mm, 1.6mm, 1.9mm) can be adjusted by the adjusting rod.

When moving to the left direction, keep the length of hair cut short.

## Cleaning Professional Hair Clipper

1. Press the release switch with your thumb to remove the blade.
2. Use a small brush along the blade discharge rule around or up and down brush, if more hair can also brush a few times.
3. Rinse directly under the tap or use a disposable cup to soak the knife holder in the cup.
4. After cleaning put the blade and knife holder in a dry, ventilated place.
5. Note: After cleaning the hair, push the lever to the far left before installing the tool head.



## Charging Battery status indications

1. When the charge indicator light shows “10 minutes” on the screen, it means it’s time to charge.
2. Charge the device with the professional charger in the accessory, and then connect the charger to the indoor power socket. The other end of the interface is attached to the interface of the device to charge the device.
3. The display screen will light up when the power is switched on, the number will increase rolling with the extension of charging time.
4. It will take 3 hours to fully charge. It will show “99” or “Fully Charged” when finished.
5. The working time is 240 minutes. The using time may be different due to personal habits.



**Specifications:**

Waterproof IPX0

Motor voltage: DC 3.7V

Power Source: AC100-240V 50/60Hz

Charging time: 3hours

Working time: 4hour

Battery: Lithium battery

Charging with adaptor

Accessories: long comb, cleaning brush, oil

**ENVIRONMENTAL PROTECTION**

The battery within this appliance is equipped with contained substances which may result in environmental pollution.

Do not dispose of the appliance with household waste. Please recycle at a local recycling center for proper disposal.



## 2-Year Limited Warranty

Questions: call toll-free Barbasol Customer Service (844) 777-9601

Email Support: [support@barbasolelectric.com](mailto:support@barbasolelectric.com)

This appliance is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.