

Barbasol[®]

**RECHARGEABLE
CORDLESS HAIR CLIPPER**



USE AND CARE GUIDE

(For model: CBH1-4007)

Manufactured under exclusive license of Perio Inc. ©Barbasol

PLEASE RETAIN THIS USE & CARE GUIDE FOR FUTURE REFERENCE

When using an electrical appliance, basic precautions should always be observed. Read all instructions before using this hair clipper.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a hair clipper that has fallen into water. Unplug it immediately.
2. Do not charge while bathing or in the shower.
3. Do not charge this hair clipper near a tub, toilet or sink.

WARNING/IMPORTANT

1. Read the use and care guide thoroughly before using the hair clipper.
2. Use the hair clipper only for purposes described in this use and care guide.
3. For hygienic reasons, the hair clipper should not be shared with others.
4. Regularly check the blade condition. If signs of damage are visible, do not use and notify email support at support@barbasolelectric.com.
5. Do not use if skin is red, irritated, inflamed, infected or blistered.
6. This hair clipper is for household use only.
7. Do not use in a bath tub, shower or sink, and never submerge in water.
8. Do not place or store the hair clipper in direct sunlight. Store only in a cool, dry place.
9. Keep the hair clipper out of reach of children.
10. Do not charge the hair clipper where the temperature is less than (32°F), or more than (100°F), or where it will be exposed to direct sunlight, a heat source or near excessive moisture.
11. Use the included USB charging cord only.
12. Dry the appliance completely before charging it.
13. Keep the USB charging cord away from water and handle with dry hands.
14. Grip the USB charger when disconnecting it from an AC outlet, tugging on the USB cord may damage it. Store the cord in a dry area where it will be protected from damage.
15. Do not pull, twist, or severely bend the cord.
16. Do not wrap the USB charging cord tightly around the appliance.
17. Do not take the housing apart.
18. Not to be used to cut animal hair or fur.

CHARGING


1. Use only the included USB cord supplied with this appliance.
2. Regular shaving will require 2 hours charging time for 90 minutes of runtime. Usage time may decrease over time.
3. When you charge the shaver for the first time or after three months of non use , let it charge continuously for 2 hours.
4. Do not overcharge, as this may damage the battery life.
5. Be sure to check that the ON/OFF switch is set to OFF when charging.
6. Connect the charging cord on the charging connection of the appliance.
7. Connect the other end of the charging cord to a USB charger, current 5V 1A.
8. The LCD screen will show 99 after full charged.
9. When battery capacity run out to 00, the red plug symbol on the screen will flash up to remind for charging.

PARTS IDENTIFICATION



ADJUSTABLE LEVER

1. Total 4 adjustable blade distances: 0.5mm, 1.5mm, 2.5mm, 3.5mm.
2. The blade lever is conveniently located near your right thumb if you are right handed,so that it can easily be accessed while you are holding your clipper.
3. The lever adds versatility to your clipper by allowing you to gradually change the closeness of your cut without an attachment comb.
4. When the lever is in the uppermost position,the blades will give you the closest cut leaving your hair very short. Pushing the lever downward gradually increases the cutting length.
5. In its lowest position,the lever will leave the hair the same length as a guide attachment comb.
6. The lever will also extend the use of your blades since a different cutting edge is used in each setting.
7. If heavy hair cutting has jammed the blades, you can adjust the lever to help remove wedged between the blades.

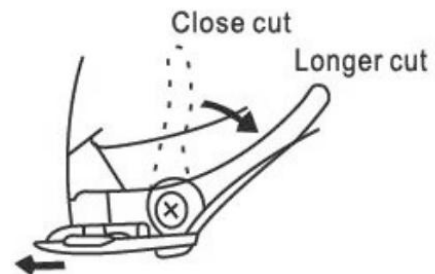

HOW TO USE THE APPLIANCE

1. Always comb the hair first before trimmer.
2. Place a towel around the neck and shoulders of the person having the haircut.
3. Push the On/Off switch to turn your hair clipper on.
4. Place the hair clipper flat against your head, moving in a straight path. It is best to trim your hair when it is dry.
5. When finished, switch off the appliance before cleaning and storing.
6. Attach the adjustable guiding comb (size: 1/3/4.5/6/10/13mm) to the hair clipper head to control how close a shave you get. The higher the size guide you use, the longer the remaining hair will be. Always be sure the guiding comb is locked solidly into the desired position before you start to trim.
7. If the hair clipper is no power, you can use it by connecting with USB cord to the charger current 5V 1A.

OILING THE BLADES

1. The LCD screen oil symbol will flash up when switch on the appliance. Please apply one or two drops of lubrication oil between cutting teeth and spread out the oil evenly.
2. Wipe off excess oil with a cloth. Finally, point the appliance down and away from you, and turn it on. This spreads the oil evenly and expels any excess.

CLEANING AND MAINTENANCE

1. Cleaning should only be done with a soft brush, such as the brush supplied with the unit.
2. Do not use harsh or corrosive cleaners on the units or their cutters.
3. Do not apply pressure or hard objects to cutters.

ENVIRONMENTAL PROTECTION

The hair clipper is equipped with contained substances which may result in environmental pollution.

Do not dispose of the hair clipper with household waste. Please properly dispose at your local recycling center.



2-Year Limited Warranty

Questions: call toll-free Barbasol Customer Service (844) 777-9601

Email Support: support@barbasolelectric.com

This hair clipper is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.