

Battery Powered Beard & Mustache Trimmer



USE AND CARE GUIDE

(For model:CBT1-3010)

Manufactured under exclusive license of Perio Inc.© Barbasol

PLEASE RETAIN THIS USE & GUIDE FOR FUTURE REFERENCE

WARNING/IMPORTANT

- 1. Read the use and care guide thoroughly before using the device.
- 2. Use the trimmer only for purposes described in this use and care guide.
- 3. For hygienic reasons, the shaver should not be shared with others.

4. If signs of damage are visible, do not use trimmer and notify email support at support@barbasolelectric.com.


- 5. Do not use if skin is red, irritated, inflamed, infected or blistered.
- 6. This trimmer is for household use only.

7. Do not place or store the trimmer in direct sunlight. Store only in a cool, dry place.

8. Keep the trimmer out of reach of children.

PARTS IDENTIFICATION

- A. Compartment Cover
- B. On/Off Switch
- C. Notches
- D. Guard

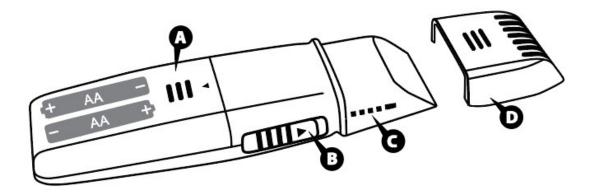

HOW TO USE THE TRIMMER

- 1. Adjust the length of the trimmer by sliding the guard (D) to the desired notch (C). You will hear it "click" into place.
- 2. Slide the power switch (B) forward to turn "ON" the trimmer. Slide the power switch in the opposite direction to turn it "OFF".

CLEANING AND MAINTENANCE OF THE APPLIANCE

- 1. Clean your personal trimmer after every use.
- 2. Be sure switch is turned in "OFF" down position
- 3. Remove the guard (D).
- 4. Use cleaning brush to remove hair clippings from the trimmer head and the guard.
- 5. Never expose trimmer body to water.

6. The guard (D) can be washed under water. Dry it completely before attaching it back onto the trimmer.

7. Do not use harsh or corrosive cleaners on any parts.

CHANGING THE BATTERY

Warning: Do not mix old and new batteries. Do not mix Alkaline, Standard (Carbon Zinc) or Rechargeable (Nickel-Cadmium). Batteries contain chemicals so do not dispose in trash. Instead, recycle or manage as hazardous waste.

- 1. Open the battery compartment cover (A) by pressing down and sliding out.
- 2. Insert 2 "AA" batteries as indicated with alternating directions.
- 3. Replace the battery compartment cover before use.

ENVIRONMENTAL PROTECTION

The battery within this trimmer is equipped with contained substances which may result in environmental pollution.

Do not dispose of the trimmer with household waste. Please recycle at a local recycling center for proper disposal.



2-Year Limited Warranty

Questions: call toll-free at (844)-777-9601

Email Support: support@barbasolelectric.com

This product is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.

Do not return to the store. Please send a proof of purchase, return label with your name and address, along with a check for \$4.95 to cover shipping and handling. Please allow 6-8 weeks to process your return.

Make check payable to Xtreme Personal Care, Inc.

Clip & Return to:

Xtreme Personal Care

32 Brunswick Ave.

Edison NJ 08817

Attention: Customer Service

ustomer Name
eturn Address
ate Purchased
tore
rief Description of Issue