

# *Barbasol*®

## PERSONAL GROOMING KIT



## USE AND CARE GUIDE

(For model:CBT1-3107)

**PLEASE RETAIN THIS USE & GUIDE FOR FUTURE REFERENCE**

**WARNING/IMPORTANT**


1. Read the use and care guide thoroughly before using the device.
2. Use the appliance only for purposes described in this use and care guide.
3. For hygienic reasons, the appliance should not be shared with others.
4. If signs of damage are visible, do not use appliance and notify email support at [customerservice@xtremecables.com](mailto:customerservice@xtremecables.com).
5. Do not use if skin is red, irritated, inflamed, infected or blistered.
6. This appliance is for household use only.
7. Do not place or store the appliance in direct sunlight. Store only in a cool, dry place.
8. Keep the appliance out of reach of children.
9. Do not insert appliance beyond the outer blade or use forcefully within nose or ear.

**BATTERY CARE**

This appliance is designed for use with one (1) AA battery (not included). If the appliance motor slows down in operation or becomes less efficient, replace the battery.

To replace the battery, gently twist off the bottom cover and insert one (1) AA battery observing correct polarity, and securely close bottom cover.

**PARTS IDENTIFICATION**

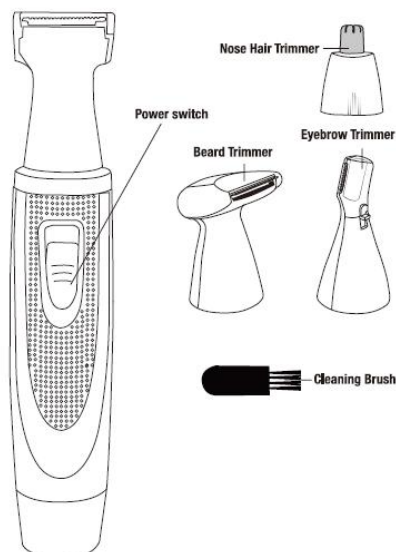

## **HOW TO USE**

### **GETTING STARTED**

Make sure to insert the batteries properly accordingly to the polarity markings (+/-) in the compartment.

NOTE: Do not leave batteries in the unit if it is not going to be used for a long period of time .

### **TRIMMING NOSE HAIR**

1. Insert the nose hair trimmer attachment.
2. Clear nasal passages before you begin.
3. Carefully insert the tip of the outer blade into your nostril to trim your nose hair. Do not press the trimmer forcefully into your nostril. Do not insert the device further into your nostril than the narrow tip on the outer blades.
4. Slowly move the trimmer tip in and out of the nostril to remove excess hair.
5. When you have finished trimming your nose hair, turn the switch to the OFF position.

CAUTION: Do not insert tip more than 5mm into the nostril. For best results, make sure the side of the tip is firm against skin. This will reduce the tickling effect that can occur.

### **TRIMMING EAR HAIR**

1. Insert the nose hair trimmer attachment.
2. Clean the outer ear, making sure it is free of wax.
3. Pull the ear flat to the head with one hand and hold the trimmer with the other.
4. Turn the trimmer on and move the tip around the edges of the ear to remove hairs extending beyond the outer ear. Then carefully insert the tip into the outer ear no more than 5mm.

CAUTION: To avoid injury, never put any part of the trimmer into the inner ear.

### **TRIMMING EYEBROWS**

1. Insert the eyebrow trimmer attachment.
2. Turn on trimmer and use the tip to cut stray eyebrow hair.
3. To shape and trim an eyebrow, hold the trimmer at an even distance from your head and move the trimmer across the eyebrow.


## TRIMMING BEARD

1. Insert the beard trimmer attachment.
2. Position the trimmer gently against the skin at the edge of the area to be trimmed.
3. Move the trimmer either against or with the direction of hair growth. For best results, hold your skin taut with one hand while trimming.

**CAUTION:** Do not apply excessive pressure. Doing so may damage the trimmer attachment or result in skin injury.



**TRIMMING NOSE HAIR**

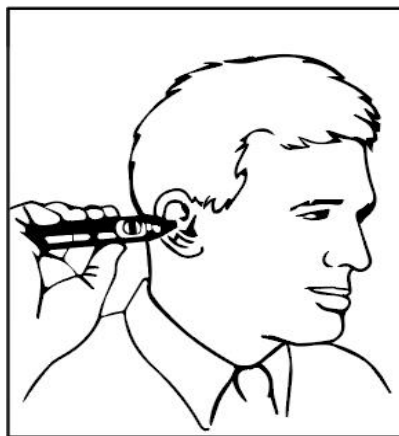

**TRIMMING EAR HAIR**



**TRIMMING EYEBROWS**



**TRIMMING A BEARD**

## **CLEANING AND MAINTENANCE**

### **CLEANING THE APPLIANCE**

1. Be sure that the switch is turned off before attempting to clean the blades.
2. Clean the appliance with a wet cloth only. Avoid using any liquid.
3. Always store in a cool dry place.
4. Remove battery if the appliance is going to be stored for a long period of time.

### **CLEANING THE BLADES**

1. Remove the outer blade frame by turning it in counter-clockwise direction.
2. Wipe the blades with the cleaning brush to remove any cut hair, dust, etc.
3. To replace the outer blade frame to the body, simply turn it clockwise until it clicks in.

### **OILING THE APPLIANCE ATTACHMENTS**

1. Apply one or two drops of lubrication oil between cutting teeth and spread out the oil evenly.
2. Wipe off excess oil with a cloth. Finally, point the appliance down and away from you, and turn it on. This spreads the oil evenly and expels any excess.

### **ENVIRONMENTAL PROTECTION**

The battery within this appliance is equipped with contained substances which may result in environmental pollution.

Do not dispose of the appliance with household waste. Please recycle at a local recycling center for proper disposal.



# 2 Year Limited Warranty

Questions: call toll-free at 877-536-8766

Email Support: [customerservice@xtremecables.com](mailto:customerservice@xtremecables.com)

This product is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.

Do not return to the store. Please send a proof of purchase, return label with your name and address, along with a check for \$4.95 to cover shipping and handling. Please allow 6-8 weeks to process your return.

Make check payable to Xtreme Personal Care, Inc.

Clip & Return to:

Xtreme Personal Care

32 Brunswick Ave.

Edison NJ 08817

Attention: Customer Service

Customer Name \_\_\_\_\_

Return Address \_\_\_\_\_

Date Purchased \_\_\_\_\_

Store \_\_\_\_\_

Brief Description of Issue \_\_\_\_\_