

Battery Powered Touch Up Trimmer



USE AND CARE GUIDE

(For model:CBT1-3500)

Manufactured under exclusive license of Perio Inc.© Barbasol

PLEASE RETAIN THIS USE & GUIDE FOR FUTURE REFERENCE

WARNING/IMPORTANT

- 1. Read the use and care guide thoroughly before using the device.
- 2. Use the trimmer only for purposes described in this use and care guide.
- 3. For hygienic reasons, the shaver should not be shared with others.
- 4. If signs of damage are visible, do not use trimmer and notify email support at support@barbasolelectric.com.
- 5. Do not use if skin is red, irritated, inflamed, infected or blistered.
- 6. This trimmer is for household use only.
- 7. Do not place or store the trimmer in direct sunlight. Store only in a cool, dry place.
- 8. Keep the trimmer out of reach of children.

DESCRIPTION

- Contains: 1 trimmer, 1 blade guard, 3 attachment combs, cleaning brush, & oil
- Designed for trimming sideburns, necklines and around ears.
- Ergonomic comfort grip with easy-to-use trigger switch enables the trimmer to fit comfortably into the palm.
- Cordless battery powered trimmer runs quietly and smoothly.
- Prior to using the trimmer make sure the battery has been installed properly

HOW TO USE THE TRIMMER

- 1. Turn trimmer on by pushing the switch located at the bottom of the unit to the ON position. Be sure to turn trimmer off immediately after use to preserve battery life.
- 2. There are two trimmer attachments for either a medium or long cut. Simply place one side of the attachment over the front of the blades and snap the other side into place. To remove, gently pull tab away from the opposite side. Be sure that the attachments are firmly in place before turning trimmer on.

CHANGING THE BATTERY

Warning: Do not mix old and new batteries. Do not mix Alkaline, Standard (Carbon Zinc) or Rechargeable (Nickel-Cadmium). Batteries contain chemicals so do not dispose in trash. Instead, recycle or manage as hazardous waste.

- 1. Slide the battery cover open to gain access to the battery compartment.
- 2. Insert 1 x AA battery into the trimmer. Be sure to align the battery so it is inserted the correct way(see diagram on inside battery compartment for reference).
- 3. Replace battery cover and ensure it clicks shut.

REPLACING COMB AND BLADE ASSEMBLY

- 1. Turn off the unit and remove the 2 screws located on top of the unit. Make sure that you maintain pressure against the large, fixed blade.
- 2. Remove comb and blade assembly. Do not remove the plastic and spring drive assembly.

OILING THE BLADES

For best results, put a drop of lubricating oil on the blade about once a month. Motor bearings are permanently lubricated, so do not attempt to oil those.

Trimmer requires very little oiling. When it is necessary to oil, turn trimmer on and hold the unit with the blades facing down. Squeeze one drop of oil onto blades. Wipe off excess with a cloth.

ENVIRONMENTAL PROTECTION

The battery within this trimmer is equipped with contained substances which may result in environmental pollution.

Do not dispose of the trimmer with household waste. Please recycle at a local recycling center for proper disposal.



2-Year Limited Warranty

Questions: call toll-free at (844)-777-9601