

Barbasol[®]

T-Blade Trimmer



USE AND CARE GUIDE

(For model:CBT1-6002)

Manufactured under exclusive license of Perio Inc.© Barbasol

PLEASE RETAIN THIS USE & GUIDE FOR FUTURE REFERENCE

WARNING/IMPORTANT

1. Read the instruction manual thoroughly before using the appliance.
2. Use the appliance only for purposes described in this instruction book.
3. For hygienic reason, the appliance should not be shared with others.
4. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge.
5. Regularly check the blade condition, if signs of damage are visible, do not use.
6. Do not use if skin is red, irritated, inflamed, infected or blistered.
7. Blades will wear over time and may require replacing.
8. Household use only.
9. Do not place or store your unit in direct sunlight. Store only in a cool dry place.
10. Keep your appliance out of reach of children.
11. Do not charge the appliance where the temperature is below (32°F), or higher than (100°F), or where it will be exposed to direct sunlight or a heat source, or near excessive moisture.
12. Use the included USB charging cord only.
13. Dry the appliance completely before charging it.
14. Keep the USB charging cord away from water and handle with dry hands.
15. Grip the USB charger when disconnecting it from an AC outlet, tugging on the USB cord may damage it. Store the cord in a dry area where it will be protected from damage.
16. Do not pull, twist, or severely bend the cord.
17. Do not wrap the USB charging cord tightly around the appliance.
18. Do not take the housing apart.

CHARGING

1. Before first use, charge for 3 hours.
2. Regular trimming will require 3 hours charge time, for 120 mins runtime. Usage time may decrease over time.
3. Do not overcharge, as this may damage the appliance battery life.
4. Ensure appliance is switched off before charging.
5. Connect the charging cord on the charging connection of the appliance.
6. Connect the other end of the charging cord to a USB charger, current 5V 1A.
7. The indicator light under the on/off switch will turn red when charged, and it will turn red after fully charged.

A QUICK LOOK AT YOUR PRODUCT



HOW TO USE THE APPLIANCE

1. Make sure your trimmer is fully charged.
2. Press the on/off switch to turn your trimmer on.
3. Place the trimmer flat against your head, moving in a straight path. It is best to trim your hair when it is dry.
4. When finished, press the on/off switch to turn your trimmer off before cleaning and storing.
5. Guiding combs: Attach a guiding comb to the trimmer head to control how close a shave you get. The higher the size guide you use, the longer the remaining hair will be. Always be sure the guiding comb is locked solidly into the desired position before you start to trim.

CLEANING AND MAINTENANCE

1. Do not use water on any part of the appliance, it is **not** a waterproof product.
2. Cleaning should only be done with a soft brush, such as the brush supplied with the unit.
3. Do not use harsh or corrosive cleaners on the units or their blades.
4. Do not apply pressure or hard objects to cutters.

ENVIRONMENTAL PROTECTION

The battery within this appliance is equipped with contained substances which may result in environmental pollution.

Do not dispose of the appliance with household waste. Please recycle at a local recycling center for proper disposal.



2-Year Limited Warranty

Questions: call toll-free Barbasol Customer Service (844) 777-9601

Email Support: <mailto:Support@Xtremecables.com>support@barbasolelectric.com

This appliance is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.

Do not return to the store. Please send a proof of purchase, return label with your name and address, along with a check for \$4.95 to cover shipping and handling. Please allow 6-8 weeks to process your return.

Make check payable to Xtreme Personal Care, Inc.

Clip & Return to:

Xtreme Personal Care

32 Brunswick Ave.

Edison NJ 08817

Attention: Customer Service

Customer Name _____

Return Address _____

Date Purchased _____

Store _____

Brief Description of Issue _____