

Barbasol®

RECHARGEABLE VACUUM BEARD TRIMMER



USE AND CARE GUIDE

(For model:CBT1-7000)

Manufactured under exclusive license of Perio Inc.© Barbasol

PLEASE RETAIN THIS USE & GUIDE FOR FUTURE REFERENCE

WARNING/IMPORTANT

1. Read the USE & GUIDE thoroughly before using the appliance.
2. Use the appliance only for purposes described in this instruction book.
3. For hygienic reason, the appliance should not be shared with others.
4. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge.
5. Regularly check the blade condition, if signs of damage are visible, do not use.
6. Do not use if skin is red, irritated, inflamed, infected or blistered.
7. Blades will wear over time and may require replacing.
8. Household use only.
9. Do not place or store your unit in direct sunlight. Store only in a cool dry place.
10. Keep your appliance out of reach of children.
11. Do not charge the appliance where the temperature is below (32°F), or higher than (100°F), or where it will be exposed to direct sunlight or a heat source, or near excessive moisture.
12. Use the included USB charging cord only.
13. Dry the appliance completely before charging it.
14. Keep the USB charging cord away from water and handle with dry hands.
15. Grip the USB charger when disconnecting it from an AC outlet, tugging on the USB cord may damage it. Store the cord in a dry area where it will be protected from damage.
16. Do not pull, twist, or severely bend the cord.
17. Do not wrap the USB charging cord tightly around the appliance.
18. Do not take the housing apart.

A QUICK LOOK AT YOUR PRODUCT



CHARGING

1. Make sure both the trimmer, USB charging cord and your hands are dry before attempting to charge.
2. Charging time 8 hours, working time around 50 minutes after full charge. Usage time may decrease over time.
3. Do not overcharge, as this may damage the appliance battery life.
4. Ensure trimmer is switched off before charging.
5. Connect the charging cord on the charging connection of the trimmer.
6. Connect the other end of the charging cord to a USB charger, current 5V 1A.

HOW TO USE THE APPLIANCE


Note: 1. The trimmer have a vacuum function that draws the cut hair in after cutting and collects it in a hair reservoir.

2. Please note that how well the vacuum function works largely depends on the length of the cut hair. It works best with short stubble.

Comb attachment:

The comb attachment is adjustable in 10 steps. This lets you preset the remaining length of the cut hair between 0.5mm to 18mm. To do this, proceed as follows:

1. Press and hold the locking mechanism of the comb attachment (see pic. arrow 1).
2. Slide the comb attachment to the desired remaining length and release the locking mechanism (see pic. arrow 2).
3. The small triangle on the comb attachment points to the scale than indicates the current length setting.
4. The trimmer also can be used without the comb attachment. To remove the comb attachment, press and hold the release mechanism and slide the comb attachment up out of its guide until you can take it off.
5. When mounting the comb attachment, make sure it sits correctly in the guide. Slide it down slowly until you hear it lock into place.

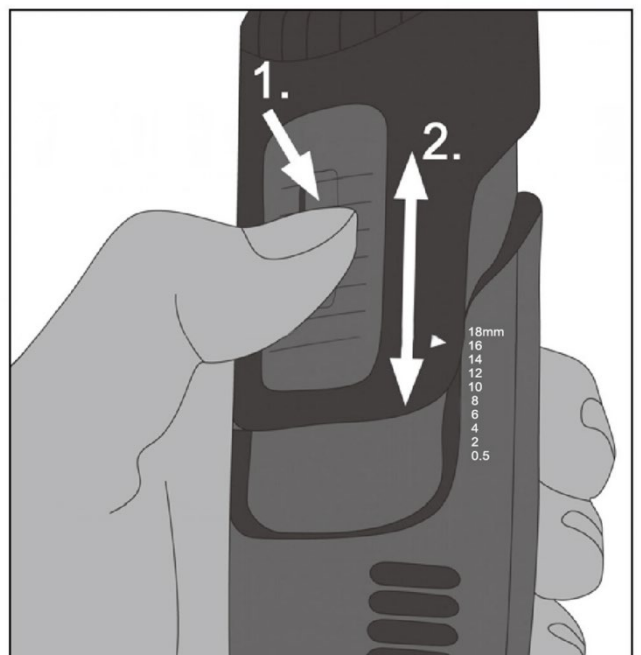

Cutting hair:

1. The hair being cut must be dry.
2. Depending on the cutting angle, the cutting length may deviate from the cutting length specified on the scale.
3. First familiarize yourself with the hair trimmer and try to hold them so that the on/off switch can be pressed at any time. Please make sure that rests securely in your hand.
4. Comb the hair thoroughly first.

5. Adjust the comb attachment to obtain the desired cutting length. If you are not sure which cutting length is right for you, start with a long setting and then change to a smaller one if you need to.
 6. Push the On/Off switch to turn your trimmer on.
 7. Always switch on the hair trimmer first before you start cutting. This will prevent the blades from getting blocked.
 8. Apply the hair trimmer so the face of the cutting blade can move parallel to the skin. Always move the hair clippers through the hair as evenly as possible.
 9. To avoid injury or skin irritation when cutting in folds of the skin or areas with thinner skin, you should stretch the skin with your fingers.
 10. Start cutting the hair at the back of the neck or sides and cut towards the crown. Then cut the hair at the front, also towards the crown.
 11. Ideally you cut against the direction of the hair growth.
 12. To cut off the hair, move the hair clippers over the same section of hair several times.
 13. For cutting lengths longer than 0.47 inch (12 mm), it is useful to move the hair trimmer through the hair several times in different directions. This results in a straight, homogeneous cut.
 14. You can also use the hair trimmer without the comb attachment. Without the comb attachment, the hair is cut close to the roots. This application is also suitable for cutting contours and trimming sideburns.
- Cutting Contours:** Apply the front edge of the cutting blade at the desired height of the hairline. Then move the hair trimmer down with an even movement.


Beard Trimming:

1. Comb the beard in the direction of growth with comb.
2. Trim the beard downward starting from the ear. First trim one side and then the other side.
3. If you want to trim the beard very short, for trimming a mustache, or to cut contours, use the hair trimmer without the comb attachment.
4. Vary the cutting length as need by adjusting the comb attachment accordingly.
5. To trim the mustache, comb it straight down with the supplied comb. Start trimming in the middle over the mouth and work your way out from there to one side and then the other.

Emptying the hair reservoir

For the vacuum function to work optimally, the hair reservoir should be emptied after every use:

1. To do so, flip open the hair reservoir cover to the right and empty the hair reservoir.
2. You can remove remaining hair with the cleaning brush
3. Then close the hair reservoir cover to restore the vacuum function. You have to hear the cover lock into place.

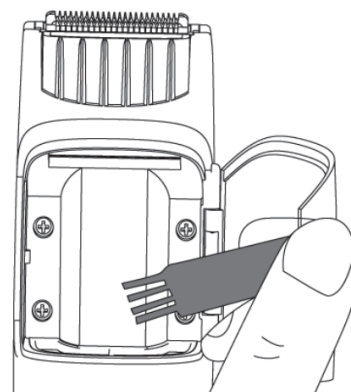

CLEANING AND MAINTENANCE

1. Clean this trimmer after every use.
2. Be sure trimmer is turned off before attempting to clean.
3. After each use, with included cleaning brush, brush and blow any remaining hair from the blade head.
4. Use a damp cloth to gently wipe the body.
5. Do not use harsh or corrosive cleaners on the units or their cutters.
6. Never immerse the trimmer in water or any other liquid.

ENVIRONMENTAL PROTECTION

The battery within this appliance is equipped with contained substances which may result in environmental pollution.

Do not dispose of the appliance with household waste. Please recycle at a local recycling center for proper disposal.



2-Year Limited Warranty

Questions: call toll-free Barbasol Customer Service (844) 777-9601

Email Support: support@barbasolelectric.com

This product is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.