



Heated Straightening Brush



USE AND CARE GUIDE

(For model:CPH1-9001)

Manufactured under exclusive license of Perio Inc. ©Pure Silk

PLEASE RETAIN THIS USER GUIDE FOR FUTURE REFERENCE

GENERAL CAUTION

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

1. This product must only be used as intended in accordance with the enclosed operating instructions.
2. Do not carry the appliance by the mains cable or pull the cable to remove the plug from the socket.
3. Do not operate this appliance if the cable or plug becomes damaged. A qualified electrician must always carry out any repairs that are necessary.
4. If the appliance stops unexpectedly or appears to malfunction, switch off the power supply, unplug from the mains and stop using immediately. Seek professional advice to rectify the fault or make repairs.
5. Switch off the power supply or unplug from the mains socket when not in use before cleaning or changing accessories.
6. Avoid positioning the appliance where the power cable might be accidentally trapped or damaged.
7. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
8. Ensure the appliance is switched OFF before connecting to the mains power supply.
9. Be aware that some surfaces may become hot. Do not touch and supervise others accordingly.
10. The unit is VERY HOT when in use. Take care to avoid contact between the hot surface of the plates and bare skin, particularly around the ears, face and neck when in use. Care should be taken not to touch this part of the appliance when it is switched on or just after it has been turned off. ALLOW AT LEAST 30 MINUTES TO COOL DOWN BEFORE PUTTING AWAY.
11. Electrical appliances must always be stored in a secure place, out of reach of children.
12. This product is not a toy. Do not allow children or any person unfamiliar with these instructions to use the appliance.
13. Close supervision is necessary when the appliance is used near children.
14. To protect against electric shock, never allow the appliance, the main cable or plug to come in contact with water or any other liquid.
15. Never reach for any appliance that has fallen into water. Switch off the power supply at the mains immediately and unplug. Do not re-use until the product has been inspected and approved by a qualified electrician.
16. Keep the appliance away from non-heat-resistant surfaces and never cover the appliance with anything (e.g. clothing or towels) when it is hot.
17. Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and mains supply connections.
18. Keep the appliance away from water. Do not use it near or over water contained in bath, washbasins, shower etc.

19. Never leave the appliance unattended when connected to the main power supply. To disconnect, first ensure that all controls are in the OFF position, then remove the plug from the electricity supply.
20. Do not use outdoors. This appliance has been designed for domestic indoor use only. Never wrap the mains cord around the appliance. Do not hang up by the power cord.
21. Regularly check the main cord for wear or damage, particularly where it enters the product and the plug.
22. Keep the straightening plates clean and free of dust, dirt, styling spray and gel. Never use the appliance in combination with styling mousse, styling spray, gel etc.

EXTRA SAFETY PRECAUTIONS

1. The appliance should NEVER be stored while hot or still plugged into the electrical outlet. Always ensure the appliance is switched off, unplugged and it has cooled down completely before storing.
2. DO NOT USE WHILE BATHING.

PRODUCT INTRODUCTION



HOW TO USE

For best results, wash, comb and dry hair until just damp to touch – although the hair straightener can be used for touch ups at any time.

1. Fully unwind the power cord.
2. Connect the appliance to a properly installed electrical outlet and place on a smooth, flat, dry surface.
3. Press the on/off button, the light turns blue to indicate that the appliance is heating up.
4. Let the appliance heat up. Never leave the appliance unattended when it is plugged in. Never put the appliance on a surface that is not heat-resistant when it is heating up and when it is hot.
5. Section dry hair evenly before styling.
6. To add volume, brush the hair slowly, starting from the roots and pulling in the upward direction.
7. For straight results, brush the hair slowly pulling downward on the section in use.
8. For wavy, flip results, brush the hair slowly in a downward direction while twisting the brush.
9. After a couple of uses on the product you will find the optimum time to hold your hair. Always experiment on a small area of hair first to ensure you achieve the results you want.
10. Push the on/off button to turn the unit off, unplug from electrical outlet.

CLEANING

1. Make sure the appliance is switched off and unplugged.
2. Let the appliance cool down completely on a heat-resistant surface. Never wrap the main cord around the appliance.
3. Clean the appliance with a damp cloth.

STORAGE

Never wrap the power cord around the appliance.

1. Make sure the appliance is switched off and unplugged.
2. Let the appliance cool down completely on a heat-resistant surface before storing it.
3. Lock the straightening plates together before storing the appliance.
4. Place the straightening brush in the heat-resistant pouch for easy storage and portability.

PROPER WASTE DISPOSAL FOR THE ENVIRONMENT

Do not throw the appliance away with the normal household waste at the end of its use.

Please properly dispose at your local recycling center. By doing this you will help to preserve the environment.



TROUBLESHOOTING

ISSUE: The appliance does not work at all.

1. Check whether the power supply is working. If it is, check whether the electrical outlet is live by plugging in another appliance.
2. Check the power cord for damaged. If the power cord is damaged, it must be replaced by the service center in order to avoid a hazard.

SPECIFICATION

Voltage: 110-240V~50/60Hz

Power:40W



Not suitable for use in the bath or shower.

2-Year Limited Warranty

Questions: call toll-free at (844)-777-9601

Email Support: support@barbasolelectric.com

This appliance is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.

Do not return to the store. Please send a proof of purchase, return label with your name and address, along with a check for \$4.95 to cover shipping and handling. Please allow 6-8 weeks to process your return.

Make check payable to Xtreme Personal Care, Inc.

Clip & Return to:
Xtreme Personal Care
32 Brunswick Ave.
Edison NJ 08817
Attention: Customer Service

Customer Name _____
Return Address _____
Date Purchased _____
Store _____
Brief Description of Issue _____