



Professional Flat Iron



USE AND CARE GUIDE

(For model:CPH1-9004)

Manufactured under exclusive license of Perio Inc. ©Pure Silk

PLEASE RETAIN THIS USER GUIDE FOR FUTURE REFERENCE

GENERAL CAUTION

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

1. This product must only be used as intended in accordance with the enclosed operating instructions.
2. Do not carry the appliance by the cord or pull the cord to remove the plug from the electrical outlet.
3. Do not operate this appliance if the cable or plug becomes damaged. A qualified electrician must always carry out any repairs that are necessary.
4. If the appliance stops unexpectedly or appears to malfunction, switch off the power supply, unplug from the electrical outlet and stop using immediately. Seek professional advice to rectify the fault or make repairs.
5. Switch off the power supply or unplug from the electrical outlet when not in use before cleaning or changing accessories.
6. Avoid positioning the appliance where the power cable might be accidentally trapped or damaged.
7. Keep the appliance away from sources of heat, sharp objects or anything that may cause damage.
8. Ensure the appliance is switched OFF before plugging into the electrical outlet.
9. Be aware that some surfaces may become hot. Do not touch and supervise others accordingly.
10. The unit is VERY HOT when in use. Take care to avoid contact between the hot surface of the plates and bare skin, particularly around the ears, face and neck when in use. Do not touch this part of the appliance when it is switched on or just after it has been turned off. ALLOW AT LEAST 30 MINUTES TO COOL DOWN BEFORE PUTTING AWAY.
11. Electrical appliances must always be stored in a secure place, out of reach of children.
12. This product is not a toy. Do not allow children or any person unfamiliar with these instructions to use the appliance.
13. Close supervision is necessary when the appliance is used near children.
14. To protect against electric shock, never allow the appliance to come into contact with water or any other liquid.
15. Never reach for any appliance that has fallen into water. Switch off the appliance immediately and unplug. Do not re-use until the product has been inspected and approved by a qualified electrician.
16. Keep the appliance away from non-heat-resistant surfaces and never cover the appliance with anything (e.g. clothing or towels) when it is hot.
17. Always ensure that hands are dry before operating or adjusting any switch on the appliance or touching the plug and mains supply connections.
18. Keep the appliance away from water. Do not use it near or over water contained in bath, washbasins, shower etc.
19. Never leave the appliance unattended when plugged into the electrical outlet. To


disconnect, first ensure that all controls are in the OFF position, then unplug.

20. Do not use outdoors. This appliance has been designed for domestic indoor use only. Never wrap the power cord around the appliance. Do not hang up by the power cord.
21. Regularly check the cord for wear or damage, particularly where it enters the product and the electrical plug.
22. Keep the straightening plates clean and free of dust, dirt, styling spray and gel. Never use the appliance in combination with styling mousse, styling spray, gel etc.

EXTRA SAFETY PRECAUTIONS

1. The appliance should NEVER be stored while hot or still plugged into the electrical outlet. Always ensure the appliance is switched off, unplugged and it has cooled down completely before storing.
2. DO NOT USE WHILE BATHING.

PRODUCT INTRODUCTION

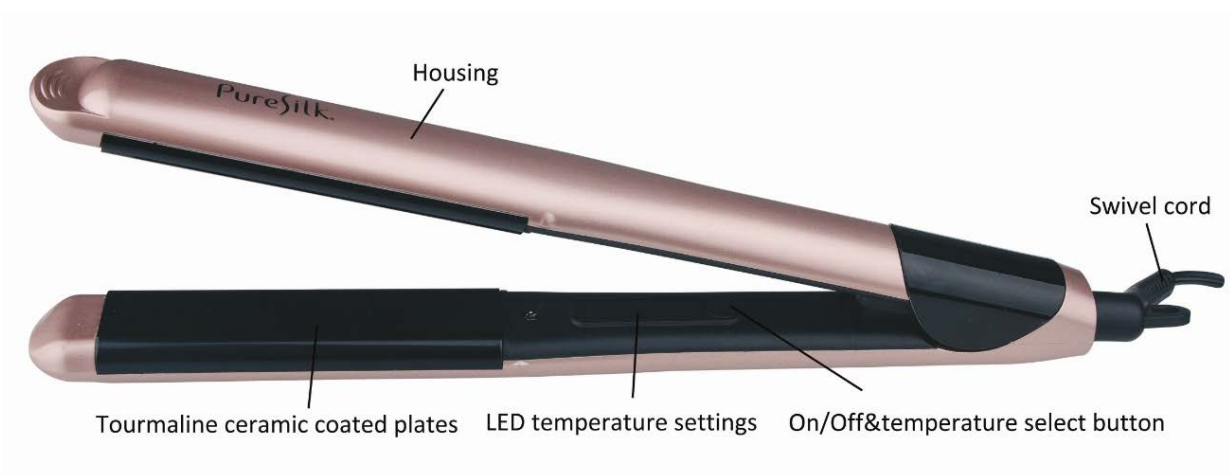

TEMPERATURE SETTINGS:

The professional flat iron has five heat settings: 270°F, 300°F, 340°F, 370°F and 410°F.

- a. When the flat iron is switched on it will be at the lowest heat setting of 270°F.
- b. To move through the heat settings repeatedly press the 'ON' button.
- c. When the selected temperature is reached the red indicator light will stop blinking.

The heat setting you choose will depend on your hair type. The following is recommended:

- a. Thick dense hair generally - 370°F - 410°F
- b. Normal hair - 340°F - 370°F
- c. Fine hair - 270°F - 300°F

HOW TO USE

NOTE: The professional flat iron will automatically shut off after operating for 1 hour. To use it again press the ON button and repeat the steps below.

1. For best results, wash, comb and dry hair until just damp to touch; although, the flat iron can be used for touch ups at any time. Place a towel around your neck to protect your skin from burning. **CAUTION!** Do not apply hair spray or other inflammable chemicals to your hair or skin.
2. Fully unwind the cord.
3. Place the appliance on a smooth, flat, dry surface.
4. Plug the appliance into the electrical outlet and press the ON button. The appliance will begin heating at the lowest temperature setting of 270°F .
5. To select the temperature, press the ON button to scroll through the different settings, and make your selection depending on your hair type. (See Temperature Settings section for more information.)
6. After 30 seconds, the professional flat iron should be ready for use.
CAUTION: Hold the professional flat iron by the handle. Keep a safe distance between the appliance and your skin and eyes.
7. For straightening hair, take a section no more than 4 to 5 cm wide and around one half inch thick. Place the hair between the two tourmaline ceramic coated plates as close as you can near the scalp (**DO NOT LET THE PLATES TOUCH THE SCALP**). Hold the plates tight by pressing the two handles together. Hold for a couple of seconds and slide the unit towards the ends.
8. **DO NOT HOLD THE HAIR BETWEEN THE PLATES FOR ANY MORE THAN 5 SECONDS, AS THIS MAY DAMAGE YOUR HAIR.**
9. When you have finished on one section, move to another area and repeat the process, allowing hair to cool before combing through.
10. When you have finished using the flat iron, switch off the appliance and then disconnect from the mains.

NOTE: After a couple of uses on the product you will find the optimum time to hold your hair between the plates. Always experiment on a small area of hair first to ensure you achieve the results you want.

Sectioning:

1. To begin, take the top layer of hair and pull it into a messy bun on top of head.
2. Take the next layer and tie it up just underneath the first run-This should leave the bottom layer loose and down.
3. When the bottom layer is straightened release the next section and straighten.
4. Continue until all hair is loose and straightened as desired.

Note: Depending on the style and thickness of the hair, you may have to section off multiple upper layers.

CLEANING AND CARE

1. Make sure the flat iron is off. Unplug it from the main outlet and allow it to fully cool.
2. The flat iron must be unplugged before cleaning.
3. Let the flat iron cool down before touching or cleaning.
4. Carefully remove any hair from in between the heating plates as you would with a brush.
5. Use a damp cloth to clean.
6. Do not use any harsh detergents, abrasives, solvents or cleaners.
7. Never immerse in water or any other liquid to clean.
8. Dry thoroughly before use.
9. If damaged, do not replace the mains supply lead into the appliance. Always use authorized representative or qualified technician.
10. Keep the appliance away from moisture. Do not put it in the dishwasher or microwave oven or anything of a similar nature.
11. Store the appliance in a cool and dry place.

PROPER WASTE DISPOSAL FOR THE ENVIRONMENT

Do not throw the appliance away with the normal household waste at the end of its use.

Please properly dispose at your local recycling center. By doing this you will help to preserve the environment.



SPECIFICATION

Voltage: 110-240V~50/60Hz

Power: 45W



Not suitable for use in the bath or shower.

2-Year Limited Warranty

Questions: call toll-free at (844)-777-9601

Email Support: support@barbasolelectric.com

This appliance is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.

Do not return to the store. Please send a proof of purchase, return label with your name and address, along with a check for \$4.95 to cover shipping and handling. Please allow 6-8 weeks to process your return.

Make check payable to Xtreme Personal Care, Inc.

Clip & Return to:

Xtreme Personal Care

32 Brunswick Ave.

Edison NJ 08817

Attention: Customer Service

Customer Name _____

Return Address _____

Date Purchased _____

Store _____

Brief Description of Issue _____