



## 3-IN-1 Heated Styler



### USE AND CARE GUIDE

(For model:CPH1-9006)

Manufactured under exclusive license of Perio Inc. ©Pure Silk

**PLEASE RETAIN THIS USER GUIDE FOR FUTURE REFERENCE**

**GENERAL CAUTION**

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

1. This product must only be used as intended in accordance with the enclosed operating instructions.
2. Do not carry the appliance by the cord or pull the cord to remove the plug from the electrical outlet.
3. Do not operate this appliance if the cable or plug becomes damaged. A qualified electrician must always carry out any repairs that are necessary.
4. If the appliance stops unexpectedly or appears to malfunction, switch off the power supply, unplug from the electrical outlet and stop using immediately. Seek professional advice to rectify the fault or make repairs.
5. Switch off the power supply or unplug from the electrical outlet when not in use, before cleaning or changing accessories.
6. Avoid positioning the appliance where the power cable might be accidentally trapped or damaged.
7. Keep the appliance away from sources of heat, sharp objects or anything that may cause damage.
8. Ensure the appliance is switched OFF before plugging into the electrical outlet.
9. Be aware that some surfaces may become hot. Do not touch and supervise others accordingly.
10. The unit is VERY HOT when in use. Take care to avoid contact between the hot surface of the plates and bare skin, particularly around the ears, face and neck when in use. Do not touch this part of the appliance when it is switched on or just after it has been turned off. ALLOW AT LEAST 30 MINUTES TO COOL DOWN BEFORE PUTTING AWAY.
11. Electrical appliances must always be stored in a secure place, out of reach of children.
12. This product is not a toy. Do not allow children or any person unfamiliar with these instructions to use the appliance.
13. Close supervision is necessary when the appliance is used near children.
14. To protect against electric shock, never allow the appliance to come into contact with water or any other liquid.
15. Never reach for any appliance that has fallen into water. Switch off the appliance immediately and unplug. Do not re-use until the product has been inspected and approved by a qualified electrician.
16. Keep the appliance away from non-heat-resistant surfaces and never cover the appliance with anything (e.g. clothing or towels) when it is hot.
17. Always ensure that hands are dry before operating or adjusting any switch on the appliance or touching the plug and mains supply connections.
18. Keep the appliance away from water. Do not use it near or over water contained in bath, washbasins, shower etc.
19. Never leave the appliance unattended when plugged into the electrical outlet. To

disconnect, first ensure that all controls are in the OFF position, then unplug.

20. Do not use outdoors. This appliance has been designed for domestic indoor use only. Never wrap the power cord around the appliance. Do not hang up by the power cord.
21. Regularly check the cord for wear or damage, particularly where it enters the product and the electrical plug.
22. Keep the plates clean and free of dust, dirt, styling spray and gel. Never use the appliance in combination with styling mousse, styling spray, gel etc.

### EXTRA SAFETY PRECAUTIONS

1. The appliance should NEVER be stored whilst hot or whilst still plugged into the electrical outlet. Always ensure the appliance is switched off, unplugged and it has cooled down completely before storing.
2. DO NOT USE WHILE BATHING.

### PRODUCT INTRODUCTION



## **HOW TO USE**

1. For best results, wash, comb and dry hair until just damp to touch; although, the 3-in-1 heated styler can be used for touch ups at any time. Place a towel around your neck to protect your skin from burning. CAUTION! Do not apply hair spray or other inflammable chemicals to your hair or skin.
2. Fully unwind the cord.
3. Plug the appliance to a properly installed electrical outlet and place on a smooth, flat, dry surface.
4. Switch on the appliance using the button. The LED light will turn on showing the unit is on.
5. After 60 seconds the appliance should be ready for use.
6. This product has curl, kinky curl and straighten function. Switch the function by adjusting the function conversion button.
7. Choose a section of hair to test for your preferred results (thick hair will need held between the plates longer time than thin hair).

CAUTION: Hold the 3-in-1 heated styler only by the handle and heat-resistant anti-scald cool tip. Keep a safe distance between the appliance and your skin and eyes.

### **Making Curls**

1. Push the “function conversion button to the middle position to close the kinky curl and straighten plates.
2. Open the curls barrel and clamp the end of a hair section.
3. Hold the heat-resistant cool tip and handle, wind the tong up towards the hair root.
4. Hold the styler in the needed position for 10-20 seconds, then release the clamp and slide the hair out of the barrel. NOTE: The time in which you need to hold your hair in the styler is dependent on the thickness of your hair and your desired results.
5. Repeat step 2 to 4 to curl the rest of the hair.

### **Making Straight Hair and Hair Styling**

1. Put the product right side up, push the function conversion button toward the on/off switch to close the kinky curl and central plates.
2. Place a section of hair between the plates.
3. Hold the handle and the heat-resistant anti-scald cool tip and slide the hair down from the root to the tip. To prevent the hair from overheating, the action should be done fluidly, without pause.
4. For hair styling, slightly rotate the handle inward or outward when straightening .When the styler slides down to the last 3-5cm of the hair, hold in place for a few seconds and then release.
5. Repeat step 2 to 3 to straighten the rest of the hair.

### **Making Kinky Curly Hair**

1. Put the product right side up and push the function conversion button toward the plates to close the straighten and central plates.
2. Divide hair into sections (two top sections and two bottom sections) and secure with the hair clips.

3. Unclip the first section of hair and place between the kinky curling plates. Clamp down the plates and hold for a few seconds and release. NOTE: The time in which you need to hold your hair in the styler is dependent on the thickness of your hair and your desired results.

4. Repeat step 3 for all sections of hair.

**Note:** When you have finished using the 3-in-1 heated styler, switch off the appliance and then disconnect from the electrical outlet.

#### **CLEANING AND CARE**

1. Make sure the flat iron is off. Unplug it from the mains and allow it to fully cool.
2. The flat iron must be unplugged before cleaning.
3. Let the flat iron cool down before touching or cleaning.
4. Carefully remove any hair from in between the heating plates as you would with a brush.
5. Do not use any harsh detergents, abrasives, solvents or cleaners.
6. Never immerse in water or any other liquid to clean.
7. Dry thoroughly before use.
8. If damaged, always use authorized representative or qualified technician.
9. Keep the appliance away from moisture. Do not put it in the dishwasher or microwave oven or anything of a similar nature.
10. Store the appliance on a cool and dry place.

#### **PROPER WASTE DISPOSAL FOR THE ENVIRONMENT**

Do not throw the appliance away with the normal household waste at the end of its use.

Please properly dispose at your local recycling center. By doing this you will help to preserve the environment.



#### **SPECIFICATION**

Voltage: 110-240V~50/60Hz

Power: 60W



Not suitable for use in the bath or shower.

# 2-Year Limited Warranty

Questions: call toll-free at (844)-777-9601

Email Support: [support@barbasolelectric.com](mailto:support@barbasolelectric.com)

This appliance is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.

Do not return to the store. Please send a proof of purchase, return label with your name and address, along with a check for \$4.95 to cover shipping and handling. Please allow 6-8 weeks to process your return.

Make check payable to Xtreme Personal Care, Inc.

Clip & Return to:

Xtreme Personal Care

32 Brunswick Ave.

Edison NJ 08817

Attention: Customer Service

Customer Name \_\_\_\_\_

Return Address \_\_\_\_\_

Date Purchased \_\_\_\_\_

Store \_\_\_\_\_

Brief Description of Issue \_\_\_\_\_