



1" Barrel Curling Iron



USE AND CARE GUIDE

(For model:CPH1-9010)

Manufactured under exclusive license of Perio Inc. ©Pure Silk

PLEASE RETAIN THIS USER GUIDE FOR FUTURE REFERENCE

GENERAL CAUTION

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

1. This product must only be used as intended in accordance with the enclosed operating instructions.
2. Do not carry the appliance by the cord or pull the cord to remove the plug from the electrical outlet.
3. Do not operate this appliance if the cable or plug becomes damaged. A qualified electrician must always carry out any repairs that are necessary.
4. If the appliance stops unexpectedly or appears to malfunction, switch off the power supply, unplug from the electrical outlet and stop using immediately. Seek professional advice to rectify the fault or make repairs.
5. Switch off the power supply or unplug from the electrical outlet when not in use, before cleaning or changing accessories.
6. Avoid positioning the appliance where the power cable might be accidentally trapped or damaged.
7. Keep the appliance away from sources of heat, sharp objects or anything that may cause damage.
8. Ensure the appliance is switched OFF before plugging into the electrical outlet.
9. Be aware that some surfaces may become hot. Do not touch and supervise others accordingly.
10. The unit is VERY HOT when in use. Take care to avoid contact between the hot surface of the plates and bare skin, particularly around the ears, face and neck when in use. Do not touch this part of the appliance when it is switched on or just after it has been turned off. ALLOW AT LEAST 30 MINUTES TO COOL DOWN BEFORE PUTTING AWAY.
11. Electrical appliances must always be stored in a secure place, out of reach of children.
12. This product is not a toy. Do not allow children or any person unfamiliar with these instructions to use the appliance.
13. Close supervision is necessary when the appliance is used near children.
14. To protect against electric shock, never allow the appliance to come into contact with water or any other liquid.
15. Never reach for any appliance that has fallen into water. Switch off the appliance immediately and unplug. Do not re-use until the product has been inspected and approved by a qualified electrician.
16. Keep the appliance away from non-heat-resistant surfaces and never cover the appliance with anything (e.g. clothing or towels) when it is hot.
17. Always ensure that hands are dry before operating or adjusting any switch on the appliance or touching the plug and mains supply connections.
18. Keep the appliance away from water. Do not use it near or over water contained in bath, washbasins, shower etc.
19. Never leave the appliance unattended when plugged into the electrical outlet. To disconnect, first ensure that all controls are in the OFF position, then unplug.

20. Do not use outdoors. This appliance has been designed for domestic indoor use only. Never wrap the power cord around the appliance. Do not hang up by the power cord.
21. Regularly check the cord for wear or damage, particularly where it enters the product and the electrical plug.
22. Keep the barrel clean and free of dust, dirt, styling spray and gel. Never use the appliance in combination with styling mousse, styling spray, gel etc.

EXTRA SAFETY PRECAUTIONS

1. The appliance should NEVER be stored while hot or still plugged into the electrical outlet. Always ensure the appliance is switched off, unplugged and it has cooled down completely before storing.
2. DO NOT USE WHILE BATHING.

PRODUCT INTRODUCTION



HOW TO USE

1. For best results, wash, comb and dry hair until just damp to touch; although, the curling iron can be used for touch ups at any time. Place a towel around your neck to protect your skin from burning. CAUTION! Do not apply hair spray or other inflammable chemicals to your hair or skin.
2. Fully unwind the cable.
3. Plug the appliance into a properly installed electrical outlet and place on a smooth, flat, dry surface.
4. Switch on the appliance by clicking the button. The LED light indicates when the units is on.
5. After 60 seconds the curling iron should be ready for use.

CAUTION: Hold the curling iron by the handle. Keep a safe distance between the appliance, your skin and eyes.



6. Divide your hair into sections ready to place each section inside the clip (fig. 1).
The thinner the section of hair, the tighter the curl will be.
7. Take the section you want to curl and comb it first to get rid of tangles (fig. 2).
8. Take the section of hair, open the clip by pressing the lever and place the hair between the barrel and the clip (fig.3).



9. Release the lever and slide the barrel to the end of the section of hair (fig. 4).
10. Take the cool tip between your fingertips and wind the hair around the barrel until it almost reaches your scalp. Make sure the end of the section is curled in the required direction (fig.5).
11. Unwind the section of hair until the clip can be opened again with the lever (fig.6).
12. When you have finished on one section, move to another area of hair and repeat the process over the head, allowing hair to cool before combing through.
13. When you have finished using the curling iron, switch off the appliance and then disconnect from the mains.

NOTE: After a couple of uses on the product you will find the optimum time to hold your hair. Always experiment on a small area of hair first to ensure you achieve the results you want.

Sectioning:

1. To begin, take the top layer of hair and pull it into a messy bun on top of head.
2. Take the next layer and tie it up just underneath the first run-This should leave the bottom layer loose and down.
3. When the bottom layer is straightened, release the next section and straighten.
4. Continue until all hair is loose and straightened as desired.

Note: Depending on the style and thickness of the hair, you may have to section off multiple upper layers.

CLEANING AND CARE

1. Make sure the flat iron is off. Unplug it from the main outlet and allow it to fully cool.
2. The flat iron must be unplugged before cleaning.
3. Let the flat iron cool down before touching or cleaning.
4. Carefully remove any hair from in between the heating plates as you would with a brush.
5. Do not use any harsh detergents, abrasives, solvents or cleaners.
6. Never immerse in water or any other liquid to clean.
7. Dry thoroughly before use.
8. If damaged, do not replace the mains supply lead into the appliance. Always use authorized representative or qualified technician.
9. Keep the appliance away from moisture. Do not put it in the dishwasher or microwave oven or anything of a similar nature.
10. Store the appliance on a cool and dry place.

PROPER WASTE DISPOSAL FOR THE ENVIRONMENT

Do not throw the appliance away with the normal household waste at the end of its use.

Please properly dispose at your local recycling center. By doing this you will help to preserve the environment.



SPECIFICATION

Voltage: 110-240V~50/60Hz

Power: 45W



Not suitable for use in the bath or shower.

2-Year Limited Warranty

Questions: call toll-free at (844)-777-9601

Email Support: support@barbasolelectric.com

This appliance is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.

Do not return to the store. Please send a proof of purchase, return label with your name and address, along with a check for \$4.95 to cover shipping and handling. Please allow 6-8 weeks to process your return.

Make check payable to Xtreme Personal Care, Inc.

Clip & Return to:

Xtreme Personal Care

32 Brunswick Ave.

Edison NJ 08817

Attention: Customer Service

Customer Name _____

Return Address _____

Date Purchased _____

Store _____

Brief Description of Issue _____