



## Precision Bikini Trimmer



### USE AND CARE GUIDE

(For model: CPT1-8004)

Manufactured under exclusive license of Perio Inc. ©Pure Silk

**PLEASE RETAIN THIS USE & CARE GUIDE FOR FUTURE REFERENCE**

**WARNING/IMPORTANT**

1. Read the USE & CARE GUIDE thoroughly before using the device.
2. Use the appliance only for purposes described in this instruction book.
3. For the hygienic reason, the appliance should not be shared with others.
4. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge.
5. Regularly check the blade and foil condition, if signs of damage are visible, do not use.
6. Do not use if skin is red, irritated, inflamed, infected or blistered.
7. The blade will wear over time and may require replacing.
8. This product is for household use only.
9. Do not place or store your unit in direct sunlight. Store only in a cool dry place.
10. Keep your unit out of reach of children.
11. This appliance is not intended for use on eyelashes.

**A QUICK LOOK AT YOUR PRODUCT**



## **BATTERY CARE**

This appliance is designed for use with 1 (one) AAA battery (not included). If the appliance motor slows down in operation or becomes less efficient, replace the battery.

### **To insert the battery:**

1. Make sure the appliance is in the OFF position.
2. Pull the battery cover away from the body, exposing the battery compartment.
3. Insert an AAA battery into the battery compartment, paying attention to the correct polarity shown.
4. Replace the battery cover back into the body.

## **HOW TO USE**

1. Use on clean, dry skin.
2. Turn appliance on by pushing the ON/OFF switch upward.
2. Hold the appliance at a right angle to your skin.
3. Glide your trimmer across your skin, against the direction of the hair growth. Use your other hand to keep the skin stretched and taut for best results.
4. Applying excessive pressure will not result in a closer shave and may cause irritation or skin damage.
5. If you wish to use the attached guiding combs, please place it on top of the angled trimmer head, making sure the clips on the side of the comb are fully engaged on the head of the trimmer.

## **CLEANING AND CARE**

1. To maintain your appliance, carefully clean the head each time after use.
2. Rinse cutting head off under running tap water if necessary.
3. Wipe off any moisture from the appliance with a soft dry cloth
4. DO NOT use abrasive liquids or detergents.

## **INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT**

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked waste products must not be mixed with general household waste, but kept separate for treatment, recovery and recycling of the material used.

For proper treatment, recovery and recycling: please take all WEEE marked waste to your local recycle center.

