

Barbasol.[®]

ALL-IN-ONE GROOMING SET



USE AND CARE GUIDE

(For model:CBT1-5500)

Manufactured under exclusive license of Perio Inc.© Barbasol

PLEASE RETAIN THIS USE & GUIDE FOR FUTURE REFERENCE

When using an electrical appliance, basic precautions should always be observed. Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug it immediately.
2. Do not use while bathing or in the shower.
3. Do not charge this unit near a tub, toilet or sink.
4. USE ONLY in dry condition.
5. Do not submerge in water.

WARNING/IMPORTANT

1. Read the instruction manual thoroughly before using the appliance.
2. Use the appliance only for purposes described in this instruction book.
3. For hygienic reason, the appliance should not be shared with others.
4. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge.
5. Regularly check the blade condition, if signs of damage are visible, do not use.
6. Do not use if skin is red, irritated, inflamed, infected or blistered.
7. Blades will wear over time and may require replacing.
8. Household use only.
9. Do not place or store your unit in direct sunlight. Store only in a cool dry place.
10. Keep your appliance out of reach of children.
11. Do not charge the appliance where the temperature is below (32°F), or higher than (100°F), or where it will be exposed to direct sunlight or a heat source, or near excessive moisture.
12. Use the included USB charging cord only.
13. Dry the appliance completely before charging it.
14. Keep the USB charging cord away from water and handle with dry hands.
15. Grip the USB charger when disconnecting it from an AC outlet, tugging on the USB cord may damage it. Store the cord in a dry area where it will be protected from damage.
16. Do not pull, twist, or severely bend the cord.
17. Do not wrap the USB charging cord tightly around the appliance.
18. Do not take the housing apart.

CHARGING

1. Before first use, charge for 12 hours.
2. Regular trimming will require 8 hours charge time, for 35 mins runtime. Usage time may decrease over time.
3. Do not overcharge, as this may damage the appliance battery life.
4. Ensure appliance is switched off before charging.
5. Connect the charging cord on the charging connection of the appliance.
6. Connect the other end of the charging cord to a USB charger, current 5V 1A.
7. The charging indicator lights will illuminate as the appliance's battery charges.

A QUICK LOOK AT YOUR PRODUCT



USING ATTACHMENT

1. Remove an attached head, simply pull top edge of blade away from body unit. To attach, align back tab of attachment head to cavity on the inner edge of trimmer unit and push down on top of blade. Please make sure the trimmer is off when change the attachment.
2. Comb your beard in the direction that it grows to help reveal stray hairs that may be longer than the others.

3. To attach guide combs, hold comb with the teeth up. Snap guide comb attachment firmly to the bottom of the beard trimmer blade.
4. Attach needed guiding combs (1/1.5/3mm or adjustable guiding comb) to trim and taper your beard. Begin with the guide set at a long trimming length. Trim toward your chin in smooth, overlapping strokes, following the lay of your beard.
5. Always be sure the guiding comb is locked solidly into the desired position before you start to trim.
6. For a neater finished look, replace attachment blade to the detail trimmer forward. Use this blade for fine, detail trimming anywhere it is needed, such as at the sideburns near the ears, goatees, etc.
7. Insert the head of the nose & ear trimmer into your nose or ear, and lightly move it around in your nose or ear.
8. Use the T-Blade trimmer head to trim behind the ears, back of neck, beards and mustaches, and fine lines.

OILING THE BLADES

1. Apply one or two drops of lubrication oil between cutting teeth and spread out the oil evenly.
2. Wipe off excess oil with a cloth. Finally, point the trimmer down and away from you, and turn it on. This spreads the oil evenly and expels any excess.

CLEANING AND MAINTENANCE

1. Do not use water on any part of the appliance, it is **not** a waterproof product.
2. Cleaning should only be done with a soft brush, such as the brush supplied with the unit.
3. Do not use harsh or corrosive cleaners on the units or their cutters.
4. Do not apply pressure or hard objects to cutters.
5. Batteries should be replaced by an adult only. Do not use rechargeable batteries.

ENVIRONMENTAL PROTECTION

The battery within this appliance is equipped with contained substances which may result in environmental pollution.

Do not dispose of the appliance with household waste. Please recycle at a local recycling center for proper disposal.



2-Year Limited Warranty

Questions: call toll-free Barbasol Customer Service (844) 777-9601

Email Support: support@barbasolelectric.com

This appliance is covered under warranty for a period of 2 years from the purchase date. Improper use or failure to follow this use and care guide will void the warranty.

Do not return to the store. Please send a proof of purchase, return label with your name and address, along with a check for \$4.95 to cover shipping and handling. Please allow 6-8 weeks to process your return.

Make check payable to Xtreme Personal Care, Inc.

Clip & Return to:

Xtreme Personal Care

32 Brunswick Ave.

Edison NJ 08817

Attention: Customer Service

Customer Name _____

Return Address _____

Date Purchased _____

Store _____

Brief Description of Issue _____